Bickner Auditorium / 3735

Starting up

Note: if computer's desktop does not project on screen...

- 1) Make sure computer is on (open cabinet's left door below)
- 2) Turn AV system off, then on again.



Wake up system by touching screen. Press "Touch Here to Start System"




System starts up



Problems?


Call Kin-Help 764-4015


Select Floorbox #2 if you are on the north side of the room (closest to 3733)

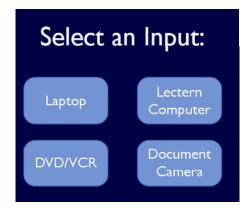


Select an input ("Document Camera" is the Visualizer).

Screen shots of the four inputs

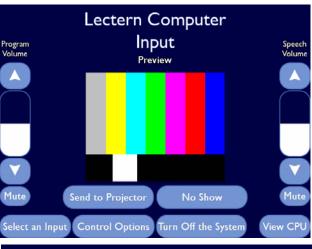


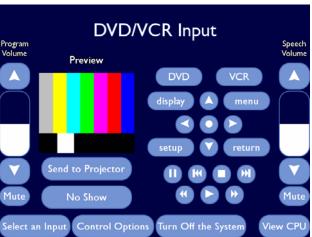

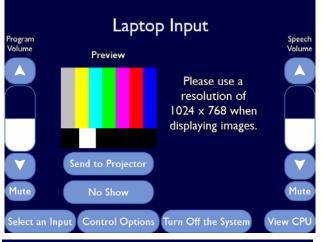

Problems?

Call Kin-Help 4-4015

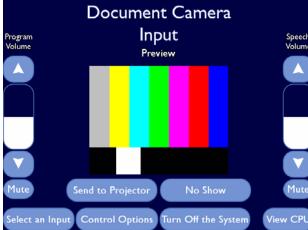

Press Send to Projector to project onto the screen. Screen will automatically descend.

It will say No input found onscreen as it warms up. Don't worry, this is normal. Wait a few minutes.


No Show is the same as Pic Mute – it quits projecting.

Program Volume is for audio coming from computer, dvd, etc. **Speech Volume** is for the microphone.

To view full screen of the CPU, press View CPU.

To play a CD or a data-formatted dvd, put it in the computer's CD drive. Movie-formatted dvds go in the dvd/vcr.

Shutting down

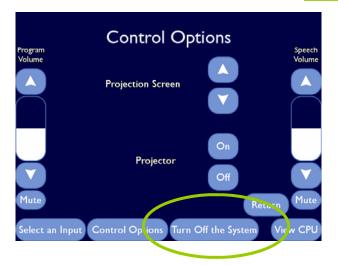



Problems?

Call Kin-Help 764-4015



Once it gets to

Please wait for the system to shutdown,
there is no way to interrupt it.