

To begin...

1. Turn on **POWER STRIP** (if it's not already on).
2. Turn on **RECEIVER** and **VCR** (if they aren't already on)
3. Turn on Sony **PROJECTOR** (if it's not already on), using the **Power** (green) button on the **REMOTE**.
4. To change screen projection modes from **video** to **computer**, etc., click the **REMOTE's input** button (right under the **power** button).
5. Adjust audio volume using the **RECEIVER's volume knob**

<i>What do you want to project onscreen?</i> ▼	Settings:			
	AV Receiver	Visualizer Switch	Extron Box	Notes
Classroom computer	Dell/IBM	VCR/ Laserdisk	2	To access the Kinesiology network, double-click the Kines Network Login icon and log in.
Laptop computer	Portable	VCR/ Laserdisk	1	1. Attach all cables and peripherals to the laptop before you turn laptop on. Laptop owners must supply their own 15-pin VGA adaptor. 2. Press FN (function) and F7 (F8 on some laptops) until your image appears onscreen. 3. You may need to set laptop's screen resolution to 1024x768. Go to START > SETTINGS > CONTROL PANELS > DISPLAY > SETTINGS .
VCR/DVD player	VCR/DVD	VCR/ Laserdisk	1	
Visualizer	Visualizer	Visualizer	2	Plug visualizer's video cable into jack inside cabinet marked with orange tape.

Problems? Here's a checklist:

1. Is the **POWER STRIP** turned on?
2. Are all AV components turned on?
3. Are all settings (as listed above) correct for what you want to project?
4. Press the **input** button on the **REMOTE** a few times
5. Press the **mute** buttons on the **REMOTE**:
 If **pic mute** is on, you won't see an image
 If **audio mute** is on, you won't hear the sound
6. Restart the **COMPUTER**
7. Turn everything (including the **POWER STRIP**) off, then on.

Before you leave:

1. **If you're logged in, just log out.**
2. If you're the last instructor of the day, please **shut down** computer and turn off **POWER STRIP** inside cabinet. Put away **REMOTE** and lock cabinet.

Thank you!